

type (BevelPosType)

[b2bOpticJobData](#) → [items](#) → [item](#) → [pair](#) → [edging](#) → [bevel](#) → [position](#)

values	description
AUTO	the position is calculated by the lens manufacturer
FRONT	distance to front side; unity of position is mm
BACK	distance to back side; unity of position is mm
RELATION	the relation of distance between front and back; unity of position is percent
FRAMECURVATURE	
FRAMEBASE	

```
<xs:simpleType name="BevelPosType">
  <xs:restriction base="xs:string">
    <xs:enumeration value="AUTO" />
    <xs:enumeration value="FRONT" />
    <xs:enumeration value="BACK" />
    <xs:enumeration value="RELATION" />
    <xs:enumeration value="FRAMECURVATURE" />
    <xs:enumeration value="FRAMEBASE" />
  </xs:restriction>
</xs:simpleType>
```

From:

<https://wiki2.b2boptic.com/> - **wiki2.b2bOptic.com**

Permanent link:

<https://wiki2.b2boptic.com/en/jobdata:version010604:simpletypes:bevelpostype>

Last update: **2020/05/15 11:17**

